

ТАБЛИЦА АДРЕСОВ ДЛЯ ФУНКЦИОНАЛЬНЫХ МОДУЛЕЙ ПРИБОРА «СФЕРА-8500», ПОДКЛЮЧАЕМЫХ К ЛИНИИ СВЯЗИ С ИНТЕРФЕЙСОМ «S2».

	Разряды DIP-переключателя								Разряды DIP-переключателя					
Адрес	1	2	3	4	5	6		Адрес	1	2	3	4	5	6
1	on	-	-	-	-	-		17	on	-	-	-	on	-
2	-	on	-	-	-	-		18	-	on	-	-	on	-
3	on	on	-	-	-	-		19	on	on	-	-	on	-
4	-	-	on	-	-	-		20	-	-	on	-	on	-
5	on	-	on	-	-	-		21	on	-	on	-	on	-
6	-	on	on	-	-	-		22	-	on	on	-	on	-
7	on	on	on	-	-	-		23	on	on	on	-	on	-
8	-	-	-	on	-	-		24	-	-	-	on	on	-
9	on	-	-	on	-	-		25	on	-	-	on	on	-
10	-	on	-	on	-	-		26	-	on	-	on	on	-
11	on	on	-	on	-	-		27	on	on	-	on	on	-
12	-	-	on	on	-	-		28	-	-	on	on	on	-
13	on	-	on	on	-	-		29	on	-	on	on	on	-
14	-	on	on	on	-	-		30	-	on	on	on	on	-
15	on	on	on	on	-	-		31	on	on	on	on	on	-
16	-	-	-	-	on	-		32	-	-	-	-	-	on

В таблице адресов включенное состояние движка указано как «on», выключенное состояние обозначено прочерком.